

Warranty

EMERSON RADIO & PHONOGRAPH CORPORATION (herein referred to as "EMERSON") warrants that each new Emerson product (including the cathode-ray picture tube originally installed in Emerson television receivers) is free from defect in material or workmanship under normal use and service for a period of 90 days from the date of sale by an authorized Emerson dealer to the first purchaser except that the warranty applicable to the cathode-ray tube shall be one year from the date of such sale. If any defect occurs during the warranty period, the original purchaser should immediately communicate with the authorized Emerson dealer from whom the Emerson product was purchased. The dealer will furnish or arrange for repair or replacement of the defective part within the terms of this warranty. The defective part should be returned promptly by the dealer through the Emerson distributor to Emerson's factory, transportation prepaid. If, upon examination by Emerson, the part is determined to be defective, Emerson will, subject to the conditions and limitations below mentioned, either repair the defective part or replace it with a new part. Emerson shall not be obligated to furnish any labor required, or be responsible for labor charges incurred, in installing or servicing an Emerson product including the removal thereof from any government restriction, priority or allocation or any part or tube; nor shall Emerson be liable for any delay or failure to furnish a replacement therefrom of any defective part or tube or the installation of a replacement thereof. Emerson shall not be obligated to furnish any labor required, or be responsible for labor charges incurred, in installing or servicing an Emerson product which has been repaired or altered in any way so as, in Emerson's judgment, to affect its stability or reliability, nor which has been subject to misuse, negligence, or accident, nor which has had the serial number altered, erased, or removed. Neither shall this warranty apply to any Emerson product which has been connected otherwise than in accordance with the instructions furnished by Emerson.

This warranty is expressly in lieu of all other warranties expressed or implied, and of all other obligations or limitations on Emerson's part and Emerson neither assumes, nor authorizes any representative or other persons to assume for it, any other liability in connection with the sale of Emerson products.



EMERSON RADIO & PHONOGRAPH CORPORATION
Jersey City, N. J.
PRINTED IN U.S.A.
548711

Operating Instructions
For Your

Emerson

Model 999

All Transistor

Pocket Radio

CONTROLS

To operate radio, turn small ON-OFF volume knob clockwise approximately three quarter turn. Rotate large tuning knob to station desired. Adjust volume knob for required volume. Since antenna is directional, reception may be improved by rotating radio slightly. To turn receiver off, rotate volume knob counter-clockwise until red dot becomes visible and click is heard. ON-OFF volume switch knob should be in OFF position when radio is not in use.

CIVIL DEFENSE SYMBOLS

This radio is also designed to be used as a Conelrad Civil Defense Receiver. Special Civil Defense symbols "Δ" are on dial for selection of Civil Defense frequencies, 640 and 1240 kilocycles. In a national emergency, all broadcasting stations will interrupt their programs and advise listeners to tune to either one of these two frequencies for information and instructions.

TUNING RANGE: 540-1620 kilocycles.


TYPE: All transistor superheterodyne radio.

BATTERIES

Your radio is powered by an Eveready # 216 battery. For extra long life, it can be replaced by either of the following mercury batteries - Eveready # 146 or Mallory TR 146 R.

TO INSERT BATTERIES

1. Insert coin into slot, located at bottom of cabinet, and twist to remove cabinet back.
2. Attach battery connector to battery terminals.
3. Insert battery into radio exactly as illustrated.

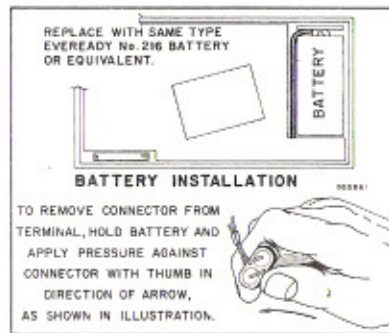

TO REPLACE BATTERIES

1. Insert coin into slot, located at bottom of cabinet, and twist to remove cabinet back.
2. Lift out battery and remove battery connector as illustrated.

3. Attach battery connector to terminals of new battery.
4. Insert battery into radio exactly as illustrated.
5. Replace with Eveready # 216 battery or equivalent.

PERSONAL LISTENING ATTACHMENT

To operate this radio without disturbing nearby persons, a personal listening attachment accessory may be purchased through your Emerson dealer. To connect listening attachment to radio, insert plug into socket provided in cabinet side. This will automatically disconnect the speaker.

IMPORTANT

1. If radio is to be stored or unused for long periods, battery should be removed.
2. Do not place radio close to a hot radiator or in an enclosed warm area such as the rear window shelf in an automobile. High heat may cause damage.
3. If radio fails to operate or the tone becomes very distorted, check or replace battery. If radio still does not operate consult your Emerson dealer.