






L O X 20 T

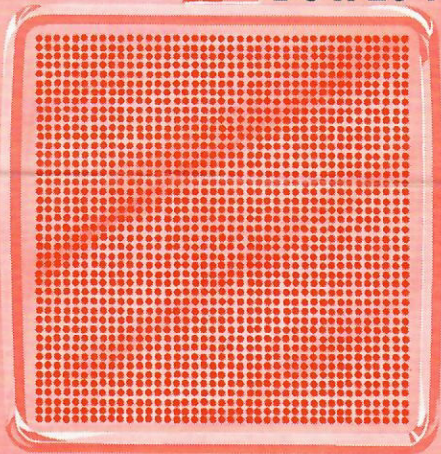

PHILIPS



openen
open
ouvrir
öffnen
abrir

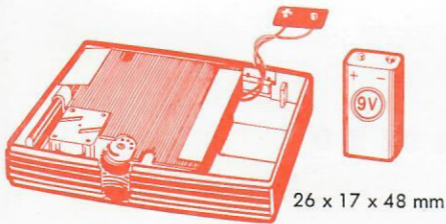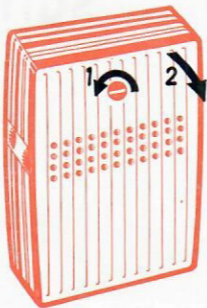

sluiten
close
fermer
schliessen
cerrar



Batterijen - Batteries

Piles - Batterien - Pilas

Berec	PP3
BQ 123	006P
Burgess	246
Daimon	16129
Eveready (U.S.A.)	216
Eveready (G.B.)	PP3
Mazda	R0603
Pertrix	438
Ray-O-Vac	1604
Witte Kat	LB514



CLICK

inschakelen
switching on
mise en marche
einschalten
conexión



MG-MW-PO-OM : 185- 580 m
(1622-517 kc/s)



LG-LW-GO-OL : 1154-2000 m
(260-150 kc/s)



volume
Lautstärke
volumen




afstemmen
tuning
accord
Abstimmung
sintonía



regelen
control
régler
regeln
controlar

toestel draaien
rotate set
tourner le poste
Gerät drehen
ladear el aparato

luisteren met oortelefoon
listening with earphone
l'écouteage avec écouteur
hören mit Kopfhörer
escucha con auricular

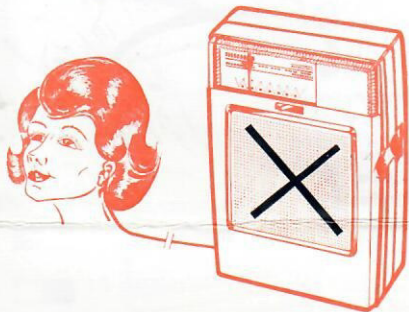

laag stroomverbruik
low current consumption
faible consommation du courant
geringer Stromverbrauch
bajo consumo de corriente

minder geluid → lager stroomverbruik
less volume → lower current consumption
faible volume → plus faible consommation
kleinere Lautstärke → geringer Stromverbrauch
menor volumen → menor consumo de corriente


verhitting → levensduur batterijen verkort

heating → life of batteries shortened

échauffment → la vie des piles est réduite

Erwärmung → Lebensdauer der Batterien verkürzt

calentamiento → duración de las pilas disminuido

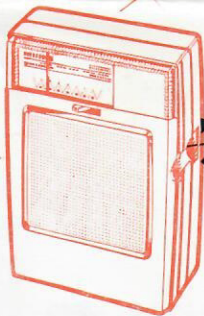

CLICK

uitschakelen
switching off
arrêt
ausschalten
desconexión



66 202 59.1-90

643