



HIS MASTER'S VOICE


about your

RCA VICTOR

"POCKETTE" PERSONAL

TRANSISTOR PORTABLE RADIO

operating **INSTRUCTIONS**

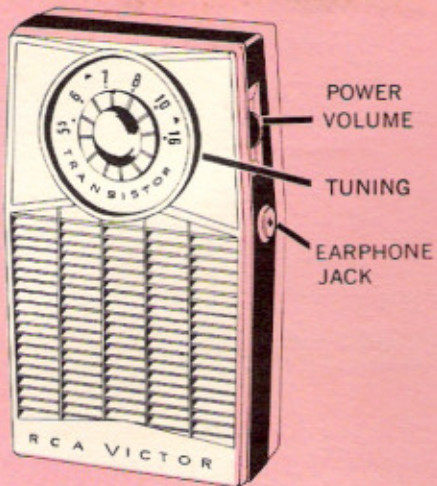

FEATURING

New Miniature Size . . . even fits inside a shirt pocket.

High Impedance Speaker.

Unparalleled Performance with Exclusive "High T" Circuit . . . provides extended peak performance.

Security Sealed Circuit . . . gives greater durability, longer life to your radio. Seals quality in, seals trouble out.

BATTERY INSTALLATION

To install battery, open case. To open, insert small coin in slot on bottom of case and pry apart.



EASY TO OPERATE

Turn POWER VOLUME clockwise to turn power on.

Turn TUNING to bring in desired programs with greatest clarity and volume.

Adjust volume by turning POWER VOLUME control as shown to increase volume.

Note: The built-in directional antenna will give excellent performance. Rotating entire receiver slightly to change antenna direction may increase station clarity and volume.

To conserve battery life when you finish operating receiver, turn set off by rotating POWER-VOLUME counterclockwise until a "click" is heard and red indicator is centered between OFF and ON.

MAINTENANCE

For continued fine performance use RCA VS 149 or RCA VS 1149 battery. This type battery is designed to yield long life under normal service conditions. When the receiver is not to be used for an extended period of time, or when battery is exhausted, remove battery. Your RCA Victor Dealer will answer further questions concerning battery needs.

Your new "personal" receiver contains tiny transistors, which take the place of conventional type tubes, designed to last almost indefinitely under conditions of normal use. Their extremely low power requirement ensures greatly extended battery life, resulting in fewer replacements and greater economy.

SERVICE

Your RCA Victor receiver is a precision instrument designed for long service. Only a skilled serviceman should inspect, adjust or repair this instrument.

If service is needed, call the RCA Victor Dealer from whom you purchased the set, your independent service dealer or the nearest RCA Service Company office. Check your local telephone directory for listings.



**For Official Information
during a Civil Defense
Emergency,**



**Tune to 640 or 1240 Kilocycles
on Your AM Radio Dial.**



The Most Trusted Name in Electronics

5-YEAR WARRANTY ON IMPAC CASE

Radio Corporation of America, hereinafter referred to as "RCA," warrants the case of this instrument to be nonbreakable under normal use and service for a period of five years from the date of sale by the RCA Victor Dealer. If this case should break, crack or chip in normal use and service within the period of this warranty, the instrument should be returned to the RCA Victor Dealer from whom it was purchased and he will effect the necessary replacement of the case. RCA will credit the RCA Victor Dealer through his RCA Victor Distributor, for the value of the case, if upon its return and inspection by RCA the case is found to have been damaged, as stated above, during normal use and service.

This warranty shall not apply to any case which has been subjected to misuse through negligence or otherwise.

The obligation of RCA under this warranty is limited to the replacement of the case which has been broken, cracked or chipped. Transportation will be paid by purchaser. RCA neither assumes nor authorizes any person to assume for it any other liability pertaining to the sale of this case.

WARRANTY

Radio Corporation of America, hereinafter referred to as "RCA," warrants to the original retail purchaser of this instrument that it will furnish a replacement for, or at its option, repair any part thereof which proves upon inspection by RCA to have been defective within ninety days from the date of original retail sale by the RCA Victor dealer, if it was used thereafter solely within the United States of America, in accordance with the terms of this warranty.

This warranty shall not apply to any part or parts, of this instrument if it has been installed, altered, repaired or misused through negligence or otherwise in a way that in the opinion of RCA affects the reliability of or detracts from the performance of any part or parts of the instrument, or if its serial number or the serial number of any such part or parts has been altered, defaced or removed, nor does this warranty cover replacements or repairs necessitated by loss or damage resulting from any cause beyond the control of RCA, including but not limited to Acts of God, acts of government, floods, fires, shortage of materials, and labor difficulties.

Within ninety days from such purchase any such defects must be brought to the attention of the RCA

Victor dealer from whom this instrument was purchased. If upon examination by RCA, the part is found to have been defective within the applicable warranty period, the RCA Victor dealer will furnish the purchaser with a new or RCA rebuilt replacement part or return the defective part repaired.

The obligation of RCA under this warranty is limited to making a new or RCA rebuilt replacement part, component, or subassembly available to the purchaser, or the repair of a defective part, component, or subassembly, and does not include the furnishing of any labor involved or connected therewith, such as that required to diagnose the necessity for replacement or repair, or to remove or install any such parts; nor does it include responsibility for any transportation expenses nor any damages or losses incurred in transportation in connection therewith.

The foregoing is in lieu of all other warranties, express, implied, or statutory, and RCA neither assumes nor authorizes any person to assume for it any other obligation or liability in connection with the sale of this instrument.

RADIO CORPORATION OF AMERICA

RCA VICTOR HOME INSTRUMENTS DIVISION

INDIANAPOLIS 1, INDIANA

1403709-1

RV054

Tmk(s)[®]

Printed in U. S. A.